


DESCRIPTION: ReNegaDE AIR BIKE PM3
CODE: 402013
VERSION: 20230905

ReNegaDE

PM3

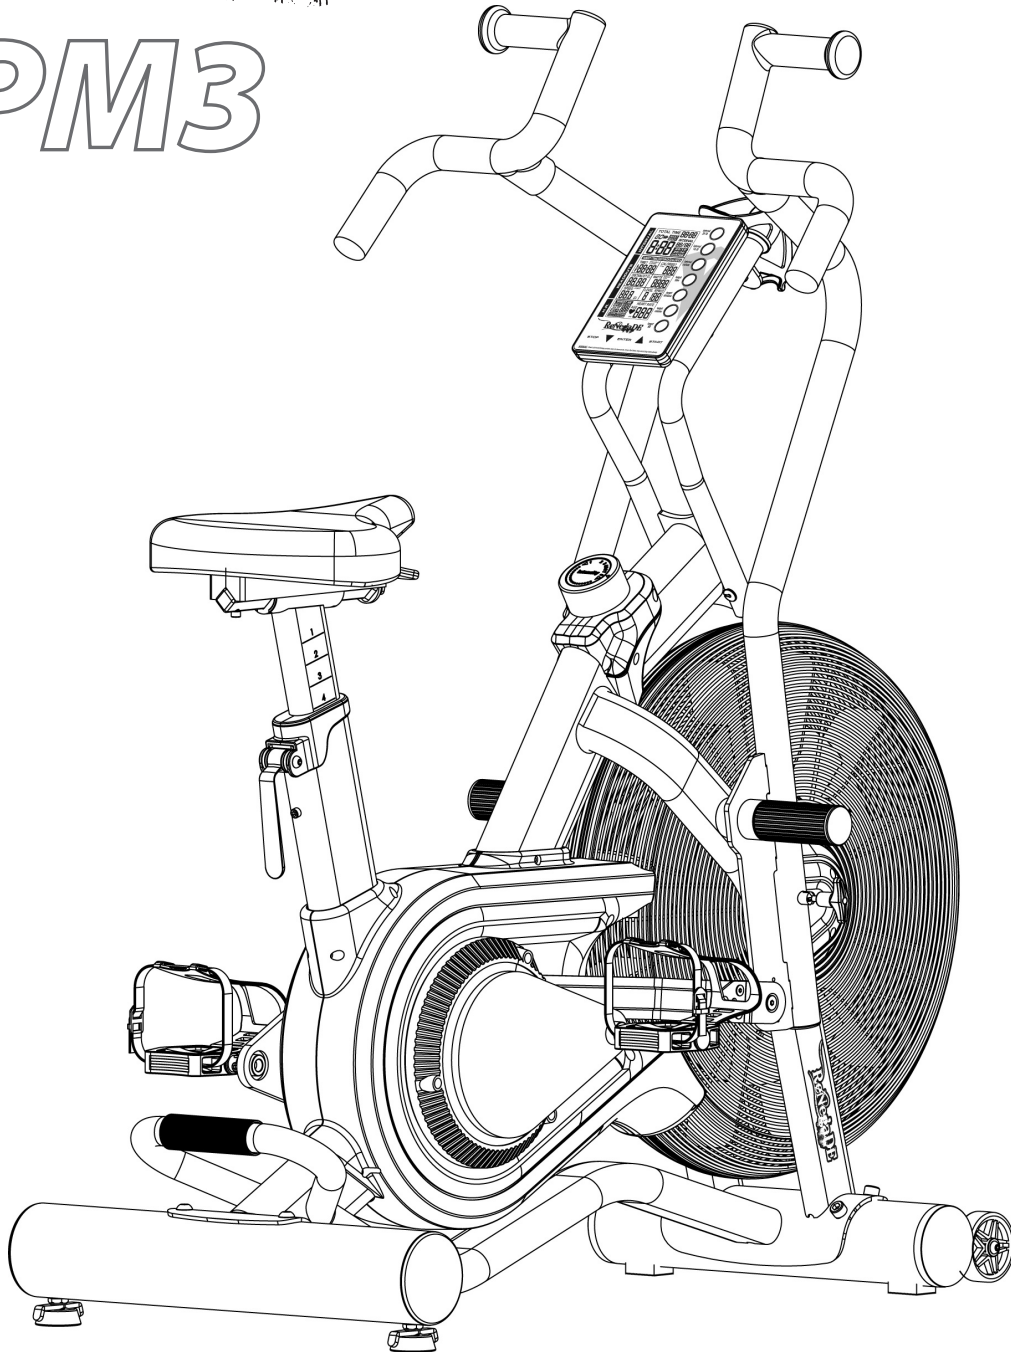

**PLEASE READ THIS INSTRUCTION MANUAL
BEFORE YOU BEGIN ASSEMBLY**

INSTRUCTION MANUAL

contents

safety information	03
customer support	04
assembly instructions	05
air bike features explained	12
computer instructions	14
- quick start	
- button functions	
- console display and feedback	
- using workout programs	
how to take care of your air bike	19
troubleshooting	20
exercising with your air bike	20
exploded diagrams and parts list	22
Console Assembly	24
your warranty	25

Safety Information

PLEASE READ THIS INSTRUCTION MANUAL BEFORE YOU BEGIN ASSEMBLY. GREAT CARE HAS BEEN TAKEN TO DESIGN THESE INSTRUCTIONS AND FOLLOWING THEM WILL HELP YOU WITH QUICKER ASSEMBLY AND MINIMISE THE RISK OF INJURY


YOU ARE RESPONSIBLE FOR YOUR OWN SAFETY - THIS LIST IS NOT EXHAUSTIVE.

- Always assemble and operate the product on a level surface, ensure that the product is stable before use.
- Try to ensure that your back is straight whilst exercising, especially for long periods
- The safety level of this equipment can only be maintained if it is regularly examined for wear and tear
- Keep hands away from moving parts.
- Replace defective components immediately, and/or keep the equipment out of use until it is repaired.
- Use only the adjustment settings as described in the instructions. Always use the correct adjustment pin/fixing.
- Special attention should be taken to inspect the components, such as pulleys, bearings, straps, rollers are always more susceptible to wear before use.
- Never leave any adjustment devices projecting from the product.
- Always wear suitable clothing and footwear e.g. tracksuit / shorts / training shoes
- Remove all personal jewellery before exercising.
- Ensure you warm-up well before using the equipment as this will help to prevent muscle strain.
- After eating, allow 1-2 hours before exercising as this will help to prevent muscle strain.
- Never overload the equipment – the maximum user weight of this bike is 150kg.
- Don't rock the bike from side to side
- Never use the equipment in any other manner other than the ways explained in these instructions and/or any wall-chart supplied.
- This product has an intergrated resistance system without a constant power mode that is governed by magnetic resistance.
- Losing grip or suddenly releasing the handle could result in an uncontrolled return, ensure there is free space around the product.
- You may want to store this product away to save space - be aware of moving mechanical parts which could cause injury.
- To prevent shock, keep all electrical components, such as the console, motor, cord and switch away from water.
- Do not use any accessories that aren't specifically recommended by the manufacturer, these might cause injuries or cause the unit to fail.
- Work within your recommended exercise level, do **NOT** work to exhaustion.
- If you feel any pain or abnormal symptoms, **STOP YOUR WORKOUT IMMEDIATELY**. Consult your physician immediately.
- Parents and others in charge of children should be aware of their responsibility, because the natural play instinct and the fondness of experimenting of children can lead to situations and behaviour for which the training equipment is not intended
- If children are allowed to use the equipment, their mental and physical development and above all their temperament should be taken into account. They should be controlled and instructed in the correct use of the equipment.
- The equipment is under no circumstances suitable as a children's toy.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **The free area shall be not less than 0.6 m greater than the training area in the directions from which the equipment is accessed.**

! Injuries to health may result from incorrect or excessive training.

! Heart Rate Monitoring System may be inaccurate, Over exercise may result in serious injury or death. If you feel faint stop exercising immediately !

! Be aware of the edges on the bike when in use or move it around.

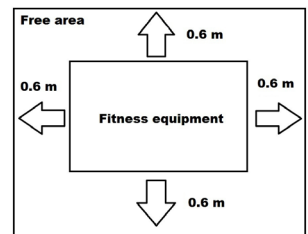

Safety Standards

This bike meets the requirements of the EN ISO 20957-1: 2013, EN ISO 20957-5: 2016 Class SC and also the EU's EMC and Low Voltage directives (where applicable).

This product is not suitable for therapeutic purposes.



! It is important that you keep these instructions for future reference.

Care & Maintenance

- Always place the equipment in a dry environment.
- Use a warm, damp cloth to keep the product clean.
- No wet cleaning of electrical components, unplug before any care and maintenance
- The safety level of the equipment can be maintained only if it is regularly examined for damage and wear. This includes any ropes, pulleys, nuts, bolts, moving parts, bushes, chains, wheels, bearings & connection points etc
- Ensure that you inspect the product regularly - at least once a week is recommended.
- Ensure that all fixings are tight before use.
- Always replace damaged / worn components with original parts from the manufacturer.



Protect the environment by not disposing of this product with household waste. Check your local authority for recycling advice and facilities (Europe only).



Customer Support

Should you require any assistance regarding this product please gather the following information, and then contact us using the details below:

1. Serial no. - this can be found on the sticker below, located as indicated. For future reference, please write down your serial number in the space provided below.
2. Original purchase date
3. Place of purchase
4. Information about the place and conditions of use
5. Precise description of the issue/defect

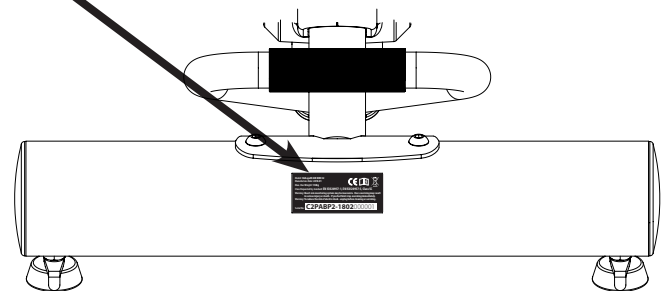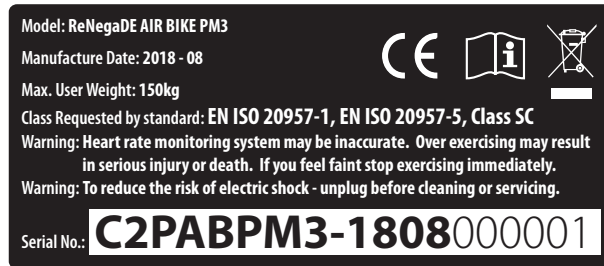







Your Serial No. is:

Contact Us


Assembly Instruction

Before you start


- 1. Prepare your work area -** it is important you assemble the product in a clean and uncluttered space.
- 2. Work with a friend -** we recommend you have someone assist you with the assembly as some of the components are quite heavy.
- 3. Open the carton -** checking any warnings on the carton and make sure you have it the right way up.
- 4. Unpack the carton** Make sure you have the following parts:

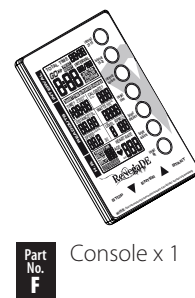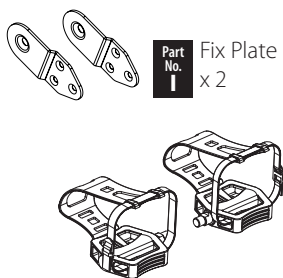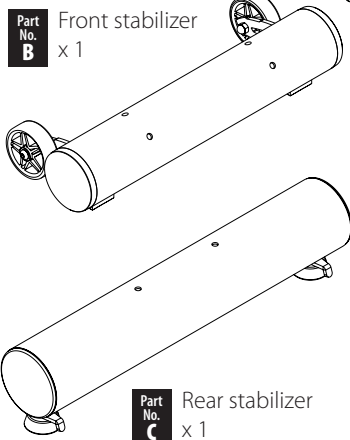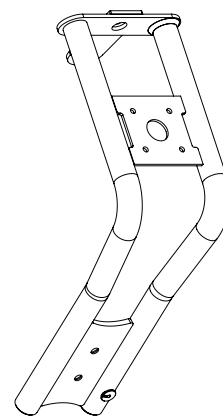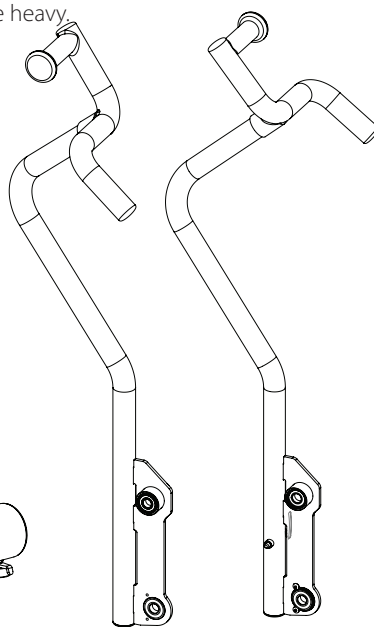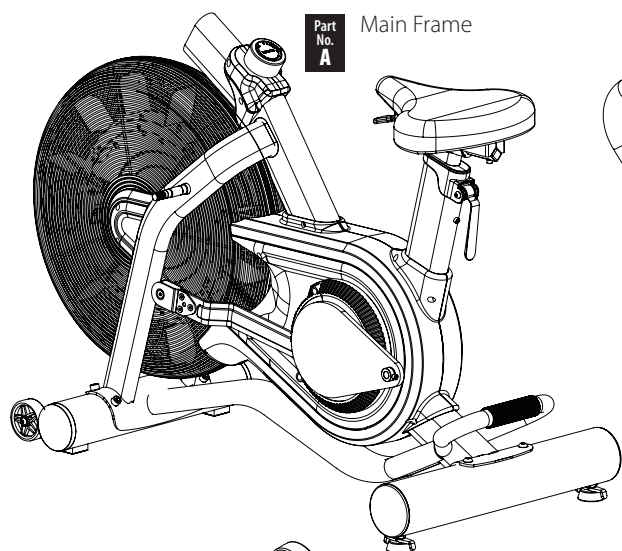

Fixings

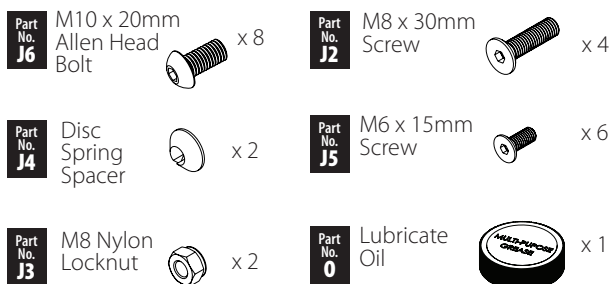

Tools and Consumables

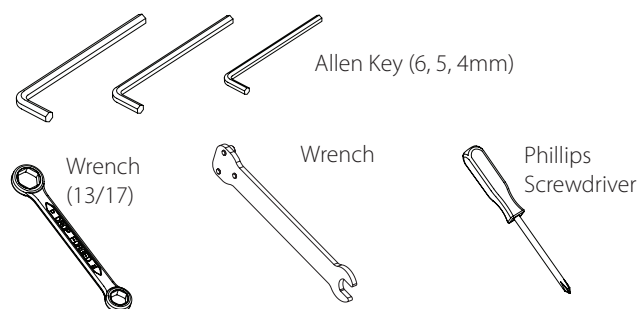


! This cycle takes up a floor space of 126cm x 70.5cm and weighs 74.5kg

! If you suspect you may have some parts missing, please contact us before going back to your retailer. Refer to the Customer Support section on page 4 for contact details.


1. Attach the Front Stabilizer

1-1. Remove the cardboard tube from the front end stabilizer bracket

- Loosen the two **M10 x 20mm Allen Head Bolt (J6)** from the cardboard tube and remove the cardboard tube.
- The cardboard tube is used for packaging protection purposes, which won't be used again during the assembly.

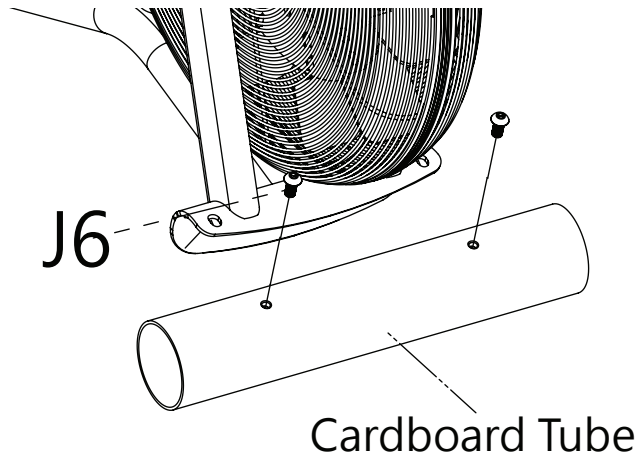

FIXINGS:

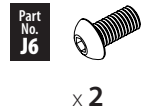

TOOLS:



1-2. Attach the Front Stabilizer

- Attach the **Front Stabilizer (B)** to the **Main Frame (A)** with four **M10 x 20mm Allen Head Bolt (J6)** and tighten these bolts with the 6mm Allen Key.


! Be sure to fit the parts in the same order as the diagrams shown.

! Make sure the bolts are fully tightened with the allen key.


! Make sure the moving wheels on the front stabiliser face out after assembly.

LUBRICATE BEFORE ASSEMBLY


Please lubricate the fastenings before assembly by applying some of the "multi-purpose grease" to each bolt shaft.

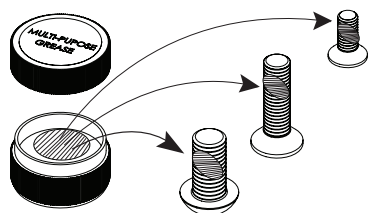

FIXINGS:

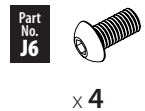


TOOLS:

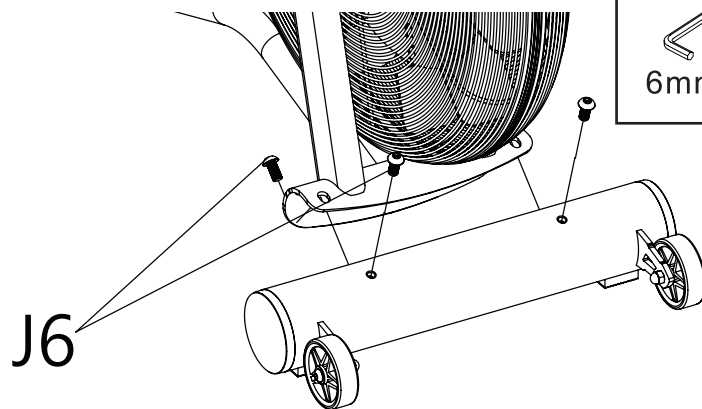

2. Attach the Rear Stabilizer

2-1. Remove the cardboard tube from the rear end stabilizer bracket

- Loosen the two **M10 x 20mm Allen Head Bolt (J6)** from the cardboard tube and remove the cardboard tube.
- The cardboard tube is used for packaging protection purposes, which won't be used again during the assembly.

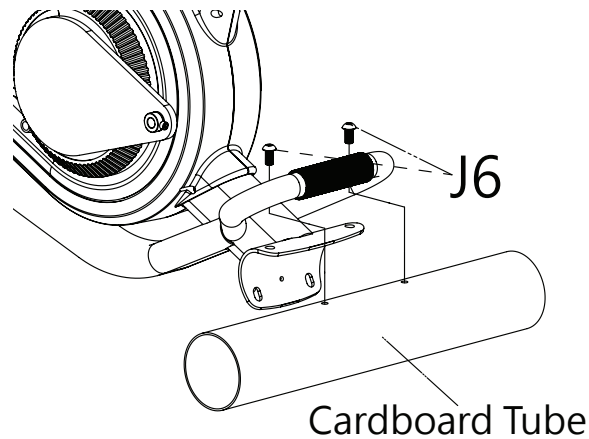

FIXINGS:



TOOLS:



2-2. Attach the Rear Stabilizer

- Attach the **Rear Stabilizer (C)** to the **Main Frame (A)** with four **M10 x 20mm Allen Head Bolt (J6)** and tighten these bolts with the 6mm Allen Key..


Be sure to fit the parts in the same order as the diagrams shown.

Make sure the bolts are fully tightened with the allen key.

FIXINGS:




TOOLS:

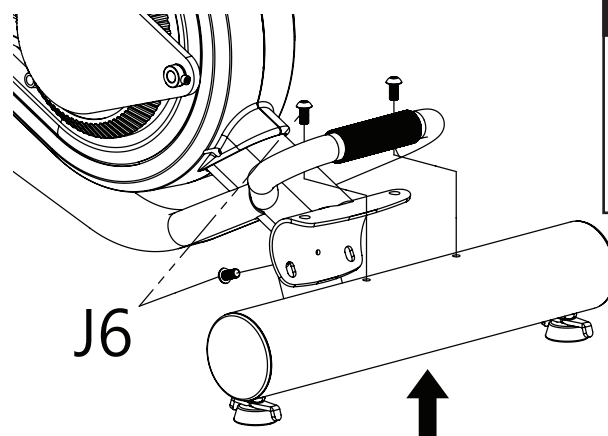

LUBRICATE BEFORE ASSEMBLY

Please lubricate the fastenings before assembly by applying some of the "multi-purpose grease" to each bolt shaft.

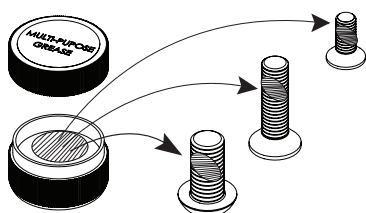


3. Attach the Dual Action Handlebars

3-1. Attach the Left Dual Action Handlebar

- Slide the **left Dual Action Handlebar (D1)** onto the pivot axle carefully.
- Install the **Foot Peg (G)** by screwing it on, and tighten it with the wrench as shown.
- Attach the **End Cap (J1)** onto the **Foot Peg (G)** securely.

! Be sure to fit the parts in the same order as the diagrams shown.

! Make sure the foot peg is fully tightened with the allen key.

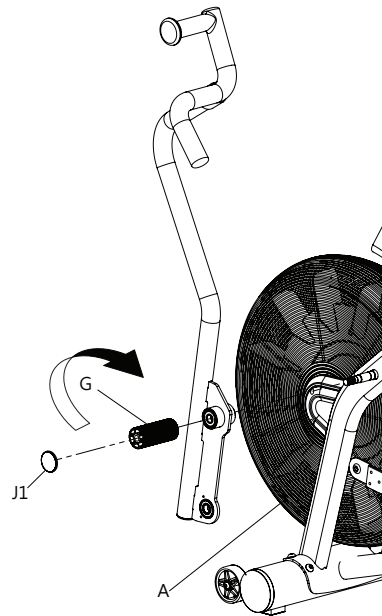

TOOLS:

Wrench

3-2. Install the Fix Plate & Linkage Bar

- Connect the **left Dual Action Handlebar (D1)** and **Linkage Bar with Fix Plate (I)**, **Disc Spacer (J4)**, **M8x30mm Screw (J2)** and **M8 Nylon Locknut (J3)** and tighten with 5mm Allen Key & 13/17 Wrench.
- Doubly secure the **Fix Plate (I)** to the Linkage Bar with three **M6x15mm Screws (J5)** and secure with 4mm Allen Key.

(You should be able to fit these three screws for better alignment by loosening the front screw assembly and try again when all four screws are in place, tighten with the allen key provided.)

! Be sure to fit the parts in the same order as the diagrams shown.


! Make sure the screws are fully tightened with the allen key.

FIXINGS:

Part No. J2		x 1
Part No. J4		x 1
Part No. J3		x 1
Part No. J5		x 3

LUBRICATE BEFORE ASSEMBLY

Please lubricate the fastenings before assembly by applying some of the "multi-purpose grease" to each bolt shaft.

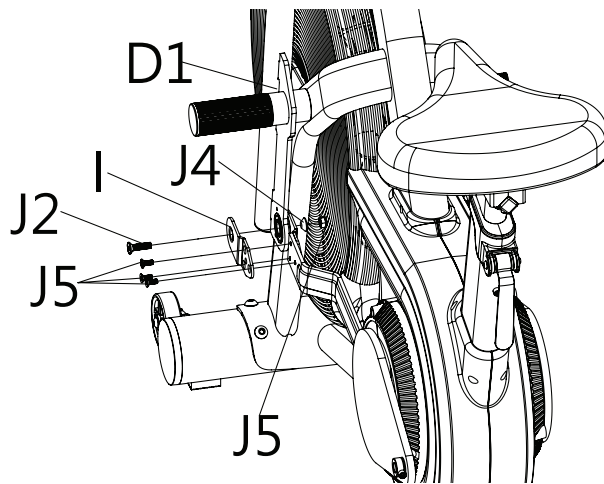

TOOLS:

5mm 4mm
Wrench
13/17


3-3. Attach the Right Dual Action Handlebar

- Slide the **right Dual Action Handlebar (D2)** onto the pivot axle carefully.
- Install the **Foot Peg (G)** by screwing it on, and tighten it with the wrench as shown.
- Attach the **End Cap (J1)** onto the **Foot Peg (G)** securely.

! Be sure to fit the parts in the same order as the diagrams shown.

! Make sure the foot peg is fully tightened with the allen key.

! Make sure the T-Knob is in un-lock position.

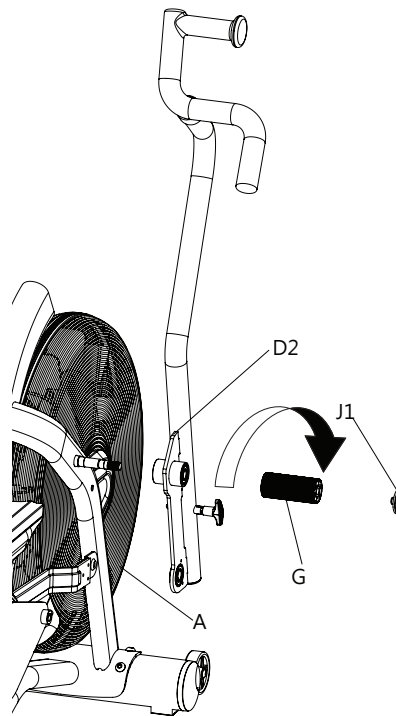

TOOLS:

Wrench

3-4. Install the Fix Plate & Linkage Bar

- Connect the **right Dual Action Handlebar (D2)** and **Linkage Bar with Fix Plate (I)**, **Disc Spacer (J4)**, **M8x30mm Screw (J2)** and **M8 Nylon Locknut (J3)** and tighten with 5mm Allen Key & 13/17 Wrench.
- Doubly secure the **Fix Plate (I)** to the Linkage Bar with three **M6x15mm Screws (J5)** and secure with 4mm Allen Key.


(You should be able to fit these three screws for better alignment by loosening the front screw assembly and try again when all four screws are in place, tighten with the allen key provided.)

! Be sure to fit the parts in the same order as the diagrams shown.

! Make sure the screws are fully tightened with the allen key.

LUBRICATE BEFORE ASSEMBLY

Please lubricate the fastenings before assembly by applying some of the "multi-purpose grease" to each bolt shaft.

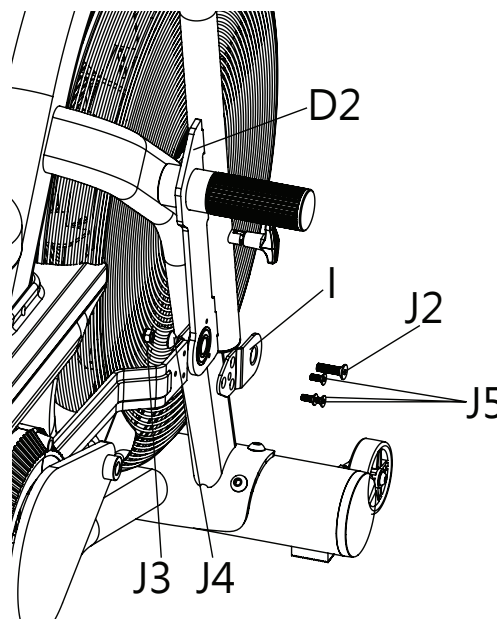

FIXINGS:

Part No. J2		x 1
Part No. J4		x 1
Part No. J3		x 1
Part No. J5		x 3

TOOLS:

5mm 4mm
Wrench
13/17

4. Attach the Pedals


4-1. Attach the Left Pedal

- Loosen the **Phillip Head Screw (J7)** fitted on the left Crank Arm.
- Attach the **Left Pedal (H1)** to the left Crank Arm and fasten with the Wrench #14 / #15.
- Fasten the **Phillip Head Screw (J7)** to the Crank Arm with the 5mm Allen Key.

Be sure to fit the parts in the same order as the diagrams shown.

This pedal will be threaded on anti-clockwise and tightened with the wrench.


Make sure the screw is fully tightened with the allen key.

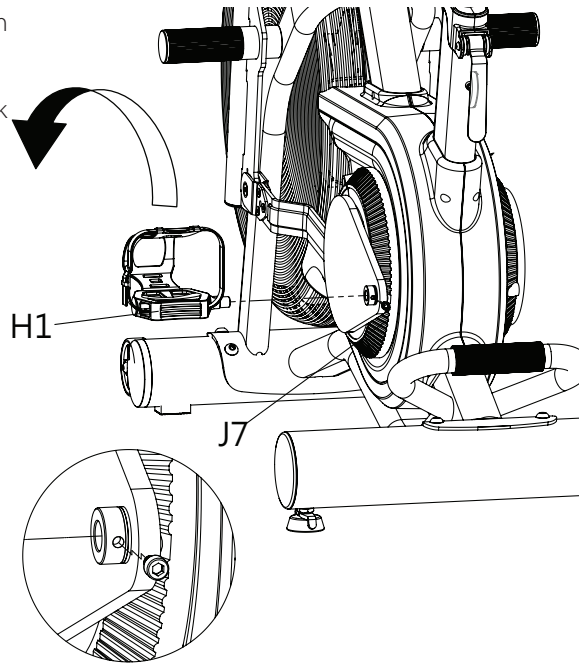

TOOLS:



5mm

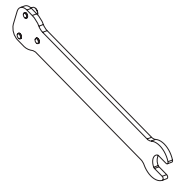

Wrench


4-2. Attach the Right Pedal

- Loosen the **Phillip Head Screw (J7)** fitted on the right Crank Arm.
- Attach the **Right Pedal (H2)** to the right Crank Arm and fasten with the Wrench #14 / #15.
- Fasten the **Phillip Head Screw (J7)** to the Crank Arm with the 5mm Allen Key.

Be sure to fit the parts in the same order as the diagrams shown.

This pedal will be threaded on clockwise and tightened with the wrench.


Make sure the screw is fully tightened with the allen key.

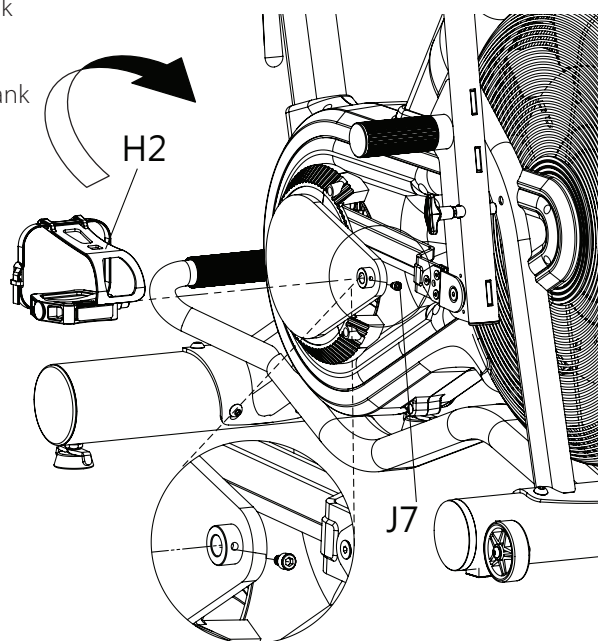

TOOLS:



5mm

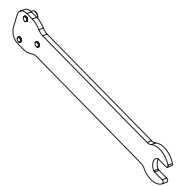

Wrench

5. Attach the Console Support


- Attach the **Console Support (E)** to the front end of the **Main Frame (A)** with two **M8x 30mm Screws (J2)** and secure with the 5mm Allen Key.
- Connect the **Sensor Cable** and **Middle Wire** together.

Be sure to fit the parts in the same order as the diagrams shown.


Make sure the cables are fully connected.

Take care not to trap the cables when attaching the console Support


Make sure the screws are fully tightened with the allen key.

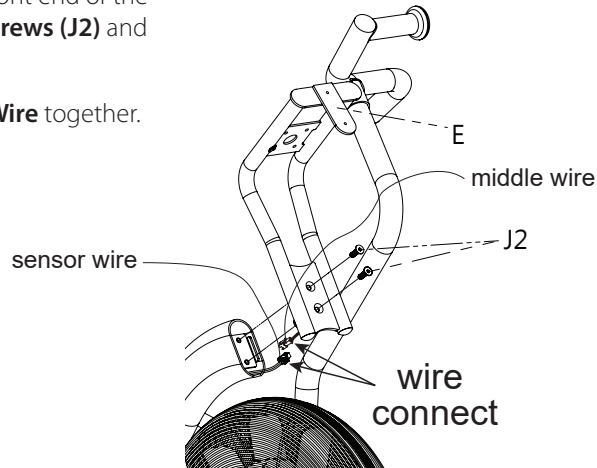

LUBRICATE BEFORE ASSEMBLY

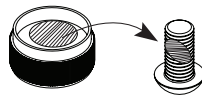

FIXINGS:

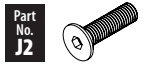

x 2

TOOLS:



5mm


6. Attach the Console

- Remove the four fixing screws which are located in the back of the **Console(8)**.
- Connect the **Console Cable** and **Middle Wire** together and then attach the **Console (F)** to the **Console Support (E)** with four **M5 x 12mm fixing screws(F1)** and secure with the Screwdriver.
- Attach the **Bottle Holder (E2)** to the front end of the **Console Support (E)** with two **Phillip Head Screws** - provided and secure with the 4mm Allen key.

Be sure to fit the parts in the same order as the diagrams shown.

Make sure the cables are fully connected.

Make sure the screws are fully tightened with the screwdriver.

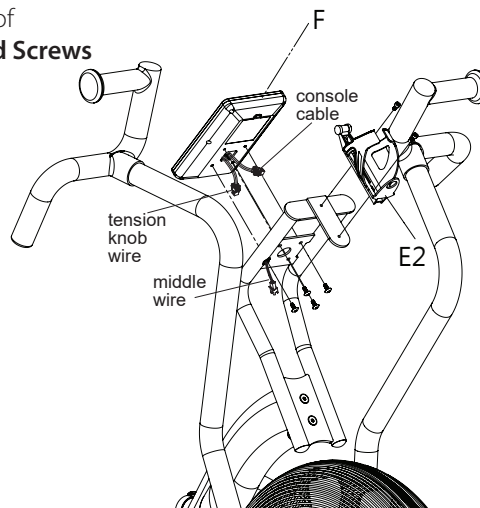

FIXINGS:



x 4




x 2

TOOLS:



Phillips Screwdriver

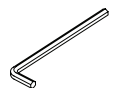

4mm

Final Checks


Your cycle is now assembled. Please make the following final checks before you use it for the first time

- Make sure all screws, bolts and nuts are tightened securely
- Make sure you have positioned it on a flat, level surface

Air Bike Features Explained


Adjusting the seat reach

1. Pull up the **Adjustment Grip (A55)** and adjust the reach of the Saddle.
2. Release the **Adjustment Grip (A55)** after the proper saddle position had found.

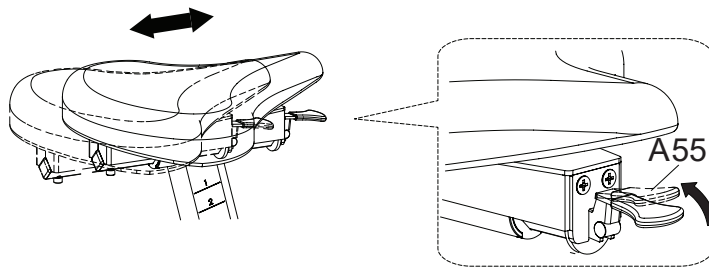

Adjusting the seat height


1. Pull up the **Cam Handle (A32)** and adjust the height of the Saddle Post.
2. Press down the **Cam Handle (A32)** securely after you have found the correct seat height.

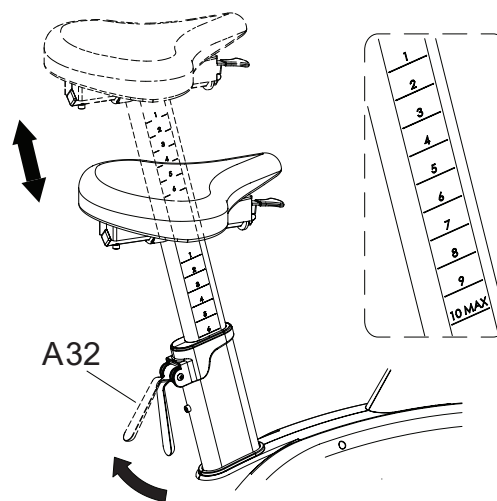

Do not pull the seat post out too far – the maximum is indicated on the seat post.

Levelling your bike


1. To help you level the air bike on uneven surface, 2 height adjusters are included on the rear stabilisers. Simply turn it to adjust the height of the air bike.

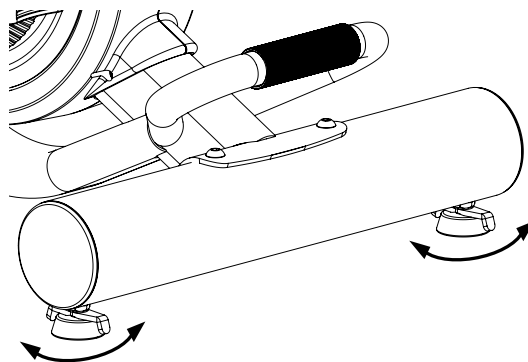

Transporting your bike


1. Your air bike has 2 transport wheels on the front stabilizer.
2. Lift the air bike using the handle at the rear end of the air bike and then pull or push to move it around.

DO NOT USE THE CONSOLE SECTION TO TIP AND TRANSPORT THE AIR BIKE

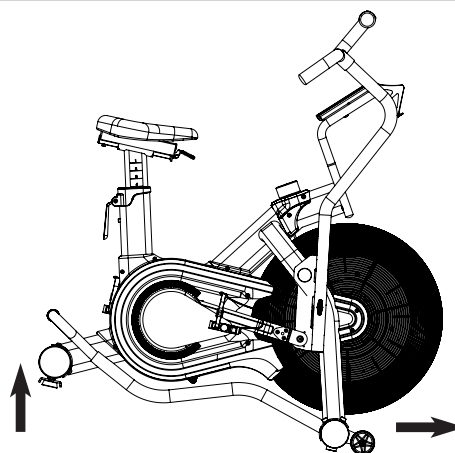


UN-LOCK - the dual arm while bike in use

1. Pull & twist the T knob.
2. Make sure the T knob is located parallel with the dual arm.
3. Release the T knob in un-locked position as shown.

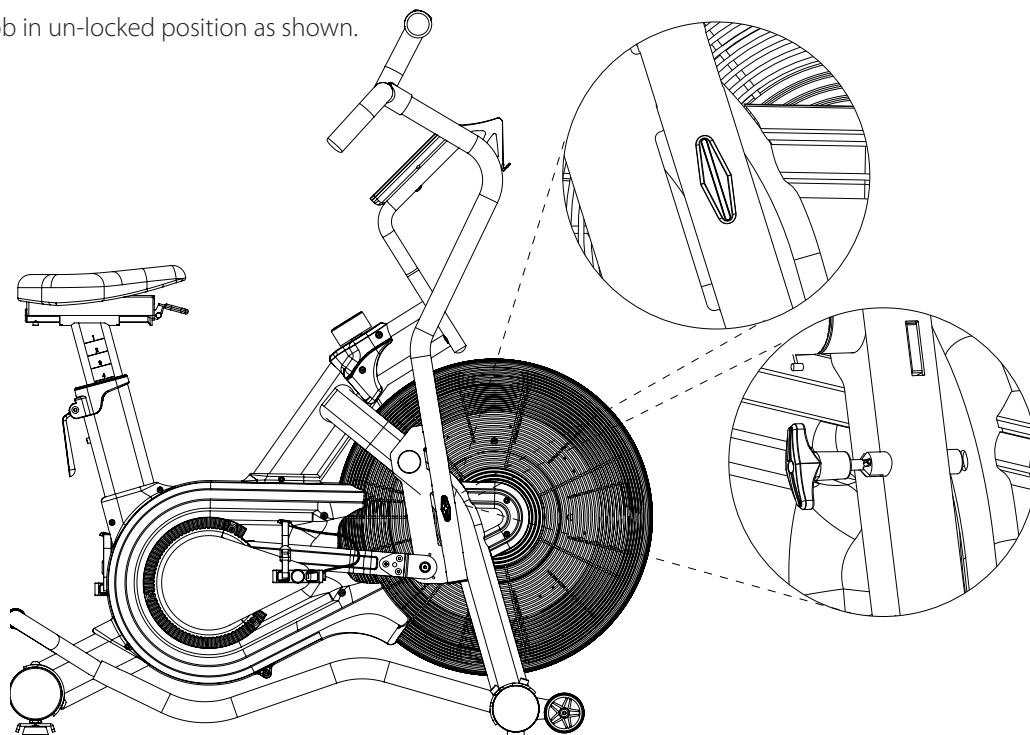

LOCK - the dual arm while bike not in use

1. Pull & twist the T knob vertically to the dual arm with right hand.
2. Guide the dual arm carefully to the locking position with left hand.
3. Release the T knob in locking position as shown.

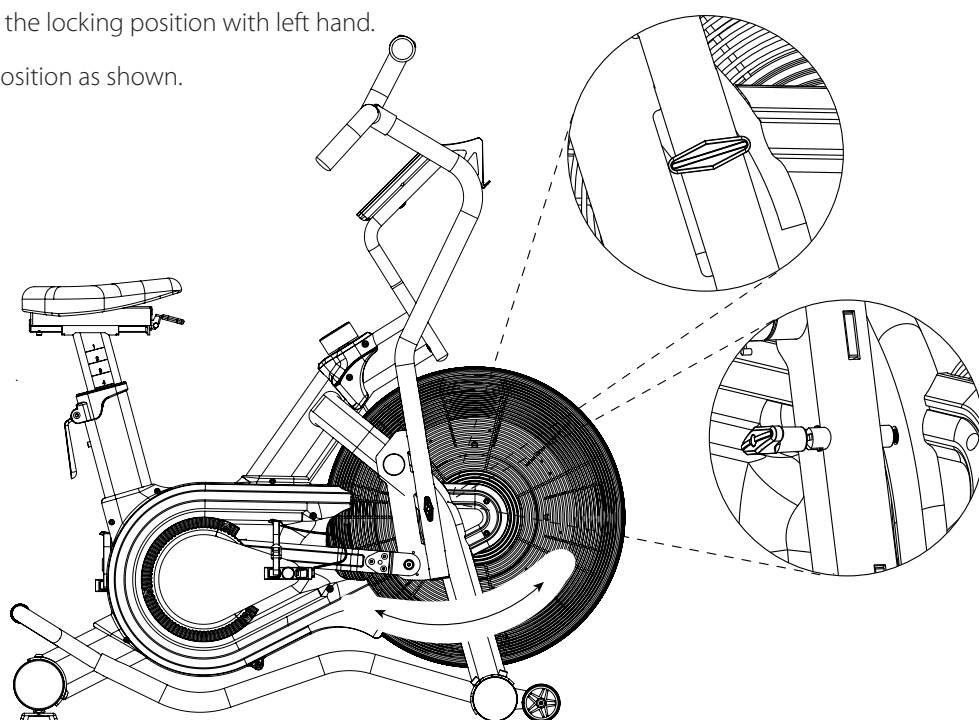

Adjusting the Resistance

1. This Bike features a speed independent (8 levels adjustable) system.
2. The harder you pedalling, the more resistance you will feel. As you put more effort into your cycling, you will go faster, produce more watts, and burn more calories. But it is more important to cycling for a longer time than to cycling harder.
3. The resistance is controlled by a magnet assembly, which is moved closer or further away from the fan wheel assembly – the closer the magnet is to the fan wheel the harder the resistance.
4. The magnet is controlled manually, by twisting the dial knob.
5. The resistance levels goes from 1 = easy to 8 = hard.

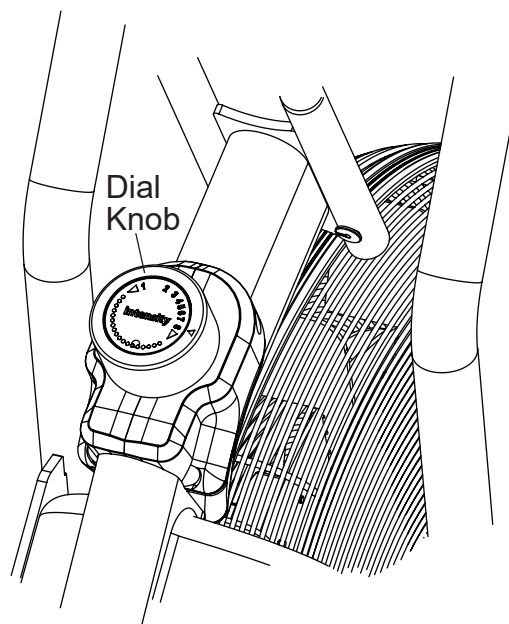


Table of Watts V.S. RPM with Level 1 ~ Level 8

RPM	L1	L2	L3	L4	L5	L6	L7	L8
10	2	2	2	3	3	4	6	10
20	8	9	11	14	19	21	27	34
30	22	23	27	35	44	55	68	81
40	47	48	56	69	78	98	120	146
50	85	88	98	117	136	160	188	222
60	141	146	159	176	211	243	278	319
70	223	228	246	278	310	347	388	434
80	330	335	337	357	396	439	518	568
90	471	485	510	540	594	653	740	810
100	650	670	715	757	835	918	1050	1117
110	865	890	915	960	1057	1163	1337	1485
120	944	1040	1143	1257	1383	1520	1675	1841

Note: The data may vary from the different magnetic structures / models

Computer Instructions

Quick Start

Use this mode if you just want a quick workout session and are not interested in setting up any personal data.

- Pedal for a few seconds to power the console on.
- Press the “ **START** ” button.
- The values of **WATTS, SPEED, RPM, HEART RATE** (if heart rate signal is detected) will start displaying.
- The values of **TIME, DISTANCE, CALORIES, WATTS** will start counting upwards.

To finish this quick workout session and view your workout summary –

- Stop pedaling.
- Press the “**STOP**” button.
- The values of **TIME, DISTANCE, CALORIES, WATTS, SPEED, RPM, HEART RATE** (if heart rate signal is detected) will be displayed.

“If you stop pedalling with the program by pedalling again. After 3 minutes of inactivity the program will end.”

Button Functions

interval 20-10

interval 10-20

interval custom

target time

target distance

target calories

target HR

STOP ▼ **ENTER** ▲ **START**

WARNING: Heart rate monitoring systems may be inaccurate. If you feel faint, stop exercising immediately

“Interval” and “Target” Program buttons

- Immediately take you to the corresponding workout selected.

STOP

- To finish or pause a workout. Press and hold to reset the computer.



- To decrease values. Press and hold for rapid value change.

ENTER

- To confirm the settings.
- Exchange “**AVG**” & “**MAX**” display during the workout.



- To increase values. Press and hold for rapid value change.


START

- To begin a workout or restart a paused program

Console Display and Feedback

INTERVAL

- Indicates the current section is in **GO** period or **REST** period of the interval program.
- **8:88** > Shows the count down **GO** or **REST** segment time.

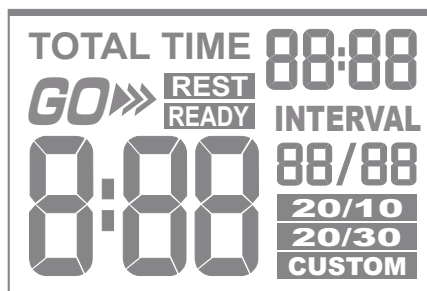


- **TOTAL TIME 88:88** > Shows the count up **GO** & **REST** total run time of the program.
- **88/88** > Shows the current interval and the total sections of intervals in the program.

- Indicates the **INTERVAL 20/10** or **INTERVAL 20/30** or **INTERVAL CUSTOM** program is selected and in used.

READOUTS

- Indicates the **TARGET TIME** or **TARGET DISTANCE** or **TARGET CALORIES** program is selected and in used.

- Indicates the time exercised this session, default counts up from zero to 1:59:00, but counts down if a target had been set.
- Indicates the distance travelled this session, default counts up from zero to 99.99 kilometers, but counts down if a target had been set.
- Indicates the current speed you are pedalling at, in km /h.

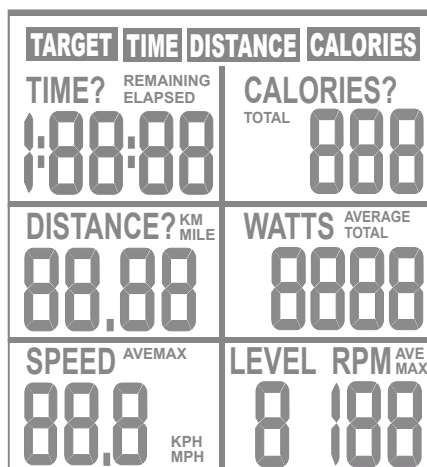


- Indicates the approximate calories burned this session (for comparison only, not to be used for medical purpose), default counts up from zero to 999 kcal, but counts down if a target had been set.
- Indicates the current energy (power) generated this session, (for comparison only, not to be used for medical purpose) default counts up from zero to 9999.
- Indicates the current Revolutions Per Minute you are pedalling at.

- Indicates the resistance level loaded this session, 1 = easy and 8 = hard.

H.R.

- Indicates the current heart rate in beats per minute (bpm), which are detected by a wireless heart rate chest belt.





- Indicates the target to exercise at 65% of your maximum heart rate.
- Indicates the target to exercise at 80% of your maximum heart rate.
- Indicates there is no heart rate signal detected in this program.
- Indicates the current heart rate is in the target range.

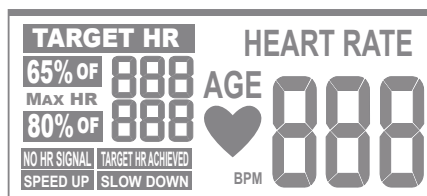

- Indicates the heart rate signal has been detected.

- Indicates an increased pedaling speed is needed to bring the heart rate into the target range.
- Indicates an decreased pedaling speed is needed to lower the heart rate into the target range.

Using Workout Programs

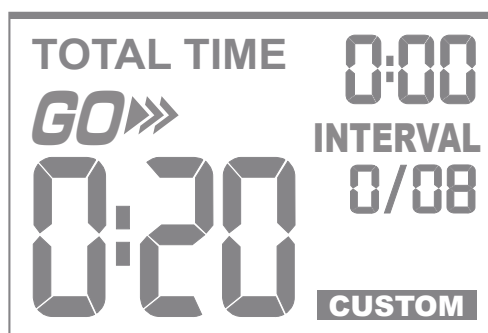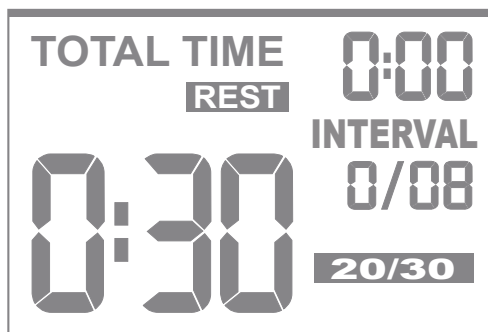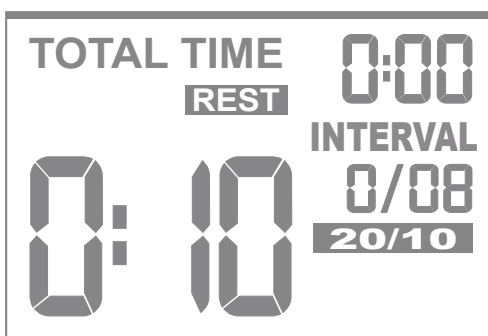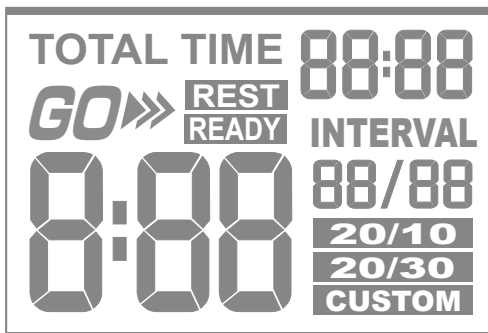

INTERVAL Programs

This console features 3 interval programs : **interval 20/10**, **interval 20/30** & **interval custom**.

The **interval 20/10** and **interval 20/30** programs offer users a series of eight high-intensity workout intervals with preset timesegments. These High Intensity Interval Training (H.I.I.T.) programs will automatically indicate the start of each **GO** & **REST** interval.

When you reach the last "**REST**" segment the console will sound a short alarm and end the workout by coming to a stop.

Interval 20 /10 Program

1. Make sure the console is switched on.
2. Press the "**interval 20/10**" to select the program mode you want.
3. The default interval number of "**0/08**" is displayed in the "**INTERVAL**" window.
4. The default time segment of "**REST 0: 10**" is displayed in the "**INTERVAL**" window.
5. Press "**ENTER**" to confirm your setting.
6. Press "**START**" to begin the workout and then start pedalling.

The program will not start until you begin pedalling.

NOTE: You can press the "**STOP**" button to end the program at any time. The workout summary will displayed on the screen.

NOTE: You can press the "**ENTER**" button to switch "**AVG**" & "**MAX**" of **SPEED / RPM** readouts during the workout.

Interval 20 /30 Program

1. Make sure the console is switched on.
2. Press the "**interval 20/30**" to select the program mode you want.
3. The default interval number of "**0 /08**" is displayed in the "**INTERVAL**" window.
4. The default time segment of "**REST 0: 30**" is displayed in the "**INTERVAL**" window.
5. Press "**ENTER**" to confirm your setting.
6. Press "**START**" to begin the workout and then start pedalling.



The program will not start until you begin pedalling.

NOTE: You can press the "**STOP**" button to end the program at any time. The workout summary will displayed on the screen.

NOTE: You can press the "**ENTER**" button to switch "**AVG**" & "**MAX**" of **SPEED / RPM** readouts during the workout.

Interval custom Program

1. Make sure the console is switched on.
2. Press the "**interval custom**" to select the program mode you want.
3. Use the "**▼ / ▲**" buttons to set your **GO** segment time (0:01 ~ 9:59 minutes)
4. Press "**ENTER**" to confirm your setting.
5. Use the "**▼ / ▲**" buttons to set your **REST** segment time (0:01 ~ 9:59 minutes)
6. Press "**ENTER**" to confirm your setting.

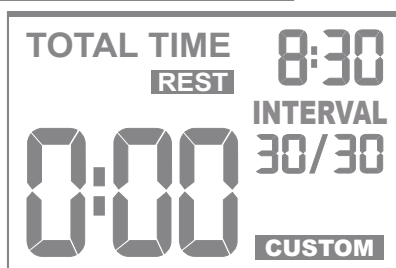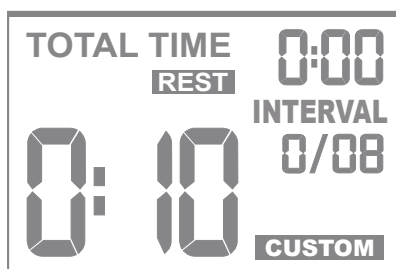

7. Use the "▼/▲" buttons to set your total interval numbers (1 ~ 99)

8. Press "ENTER" to confirm your setting.

9. Press "START" to begin the workout and then start pedalling. The program will not start until you begin pedalling.

NOTE: You can press the "STOP" button to end the program at any time. The workout summary will displayed on the screen.

NOTE: You can press the "ENTER" button twice to save the setting of this program after you complete the workout.

TARGET Programs

This console features 4 target programs : Target Time, Target Distance, Target Calories & Target Heart Rate. When you reach your target the console will sound a short alarm and end the workout by coming to a stop.

Target TIME

1. Make sure the console is switched on.
2. Press the "target time" to select the program mode you want.
3. Use the "▼/▲" buttons to set your workout time (1:00 ~ 1:59:00 minutes)
4. Press "ENTER" to confirm your setting.
5. Press "START" to begin the workout and then start pedalling. The program will not start until you begin pedalling.

NOTE: You can press the "STOP" button to end the program at any time. The workout summary will displayed on the screen.

NOTE: You can press the "ENTER" button to switch "AVG" & "MAX" of SPEED / RPM readouts during the workout.

Target DISTANCE

1. Make sure the console is switched on.
2. Press the "target distance" to select the program mode you want.
3. Use the "▼/▲" buttons to set your target distance (0.1 ~ 99.90km)
4. Press "ENTER" to confirm your setting.
6. Press "START" to begin the workout and then start pedalling. The program will not start until you begin pedalling.


NOTE: You can press the "STOP" button to end the program at any time. The workout summary will displayed on the screen.

NOTE: You can press the "ENTER" button to switch "AVG" & "MAX" of SPEED / RPM readouts during the workout.



Target CALORIES


7. Make sure the console is switched on.
 8. Press the "target calories" to select the program mode you want.
 9. The default value of "50" is flashing in the "CALORIES" window.
 10. Use the "▼/▲" buttons to set your target calories (10 ~ 990 kcal)
 11. Press "ENTER" to confirm your setting.
 12. Press "START" to begin the workout and then start pedalling. The program will not start until you begin pedalling.
- NOTE:** You can press the "STOP" button to end the program at any time. The workout summary will displayed on the screen.
- NOTE:** You can press the "ENTER" button to switch "AVG" & "MAX" of SPEED / RPM readouts during the workout.

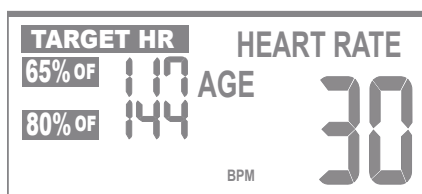

Target HR Program

You need to be wearing a compatible wireless heart rate chest belt to use this program.

Once you have entered your age the computer will calculate and display the corresponding values for 65% and 80% of your maximum heart rate, whilst also displaying your current heart rate. The computer will also prompt you to speed up or slow down to get within the 65% to 80% zone.

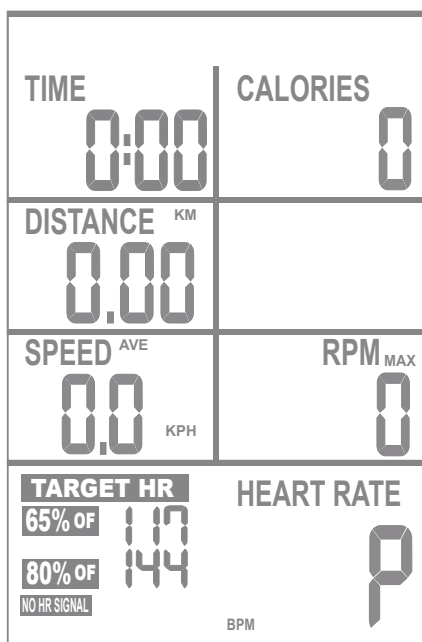

1. Make sure the console is switched on.
 2. Press the "target HR" to select the program mode you want.
 3. The default value of "30" is flashing in the "AGE" window.
 4. Use the "▼/▲" buttons to input your age (10 ~ 99)
 5. Press "ENTER" to confirm your setting.
 6. The default value of the 65% of Target HR & 80% Target HR is displayed in HR window accordingly
 7. Press "START" to begin the workout and then start pedalling. The program will not start until you begin pedalling.
- NOTE:** You can press the "STOP" button to end the program at any time. The workout summary will displayed on the screen.
- NOTE:** You can press the "ENTER" button to switch "AVG" & "MAX" of SPEED / RPM readouts during the workout.

! Do not use the Target HR program if your heart rate is not registering properly on the display.

! "NO HR SIGNAL" will flash in the HR window if there is no wireless heart rate signal detected when the program starts.

! Please see the "Exercising with your Renegade" section for more details about the benefits of target heart rate training.

How to Take Care of Your Renegade

Storage

Keep the equipment in a dry place with as little temperature variation as possible. Try to protect from dust and always unplug when not in use (if applicable).

The safety level given by the design of this air bike can only be maintained when this air bike is regularly examined for damage and wear. Inoperable components should be replaced immediately or this air bike should be put out of use until it is repaired



Never remove the protective casing.

Your air bike is designed for indoor exercising used only and should not be used or stored in damp areas.

Ensure you regularly check components for wear and make sure all the nuts & bolts are tightened before each exercise session

Maintenance Tips

- Always use a soft, cotton cloth and dilute non-abrasive cleaner or a mild detergent for cleaning the exterior of this bike.
- Never use ammonia, acid-based, or petroleum-based solvents on any portion of the bike as it may damage the finish.

Preventative maintenance Schedule

Daily –

- Before each use, make certain that the area around the bike is free of obstacles that may interfere with the dual action handlebar & pedal rotation.
- Before each use, check that pedals & shaft screws are securely tightened and inspect both pedals & pedal straps for wear.
- After each use, wipe down the surface of the air bike to remove sweat and moisture.
- Wipe the face of the display console with a slightly damp, soft, cotton cloth. Avoid getting extra moisture on the display console. Keeping the display console free of fingerprints and sweat will extend the life of the console.

Weekly –

- Thoroughly clean the plastic housing of the bike.
- Clean the top of the pedal straps, saddle & seat post, and the display console.
- Check that pedals are securely tightened and inspect both pedals and pedal straps for wear.
- Inspect all assembly bolts & nuts for wear and ensure that they are sufficiently tight.

Monthly –

- Make sure all of the open ends of metal parts are wiped with thin grease to protect from rust.
- Check the ribbed belt is correct tension: replace cracked, frayed, or otherwise non-uniform belt. If necessary, call your local authorized distributor for Customer Service replacement.
- Inspect for side-to-side play in axle assembly, and a grinding feeling in crank area when pedaling. If necessary, call your local authorized distributor for Customer Service replacement.
- Check and Replace the Console AA Battery if needed.
- Clean for dust on Fan Wheel Assembly by spray gun if available.



We do not recommend you attempt to service the internal parts of the pedal assembly. If they are found to be worn internally, we recommend replacing the pedal.



Use of lubricants or cleaning solutions other than those so specified will result in diminished performance and a shorter life span for that part.

Exercising with Your Renegade

Troubleshooting

! If you have a problem with your equipment, before you do anything else please check that all the cables have been connected correctly. Loose cables are very common and many problems can be solved by making sure the cables are properly connected

If you are having problems with your heart rate reading please note that some fibres used in clothes eg) polyester, create static electricity that may prevent a reliable heart rate reading. Mobile phones, TV's, microwaves and other electrical appliances that generate an electromagnetic field may also interfere with heart rate measurement.

If you are still having problems with your equipment, please get in touch with your local distributor using the details found in the Customer Support section on page 4.

! Always consult your doctor before undertaking a new exercise regime **If you experience nausea, dizziness or other abnormal symptoms during exercise, stop at once and consult your doctor**

Starting and finishing your workout

Begin and end each workout with a Warm Up / Cool Down session – a few minutes of stretching to help prevent strains, pulls and cramps

Correct cycling form

- Sit on the cycle, with your feet on the pedals and inside the pedal straps
- Ensure that the seat height is adjusted correctly - you should be stable and balanced whilst on the saddle. The basic rule for getting the seat height right is that as the pedal reaches its lowest point, the leg is almost straight.
- Try to ensure that your back is straight whilst exercising, especially for long periods.

How long should I exercise for?

That really depends on your current level of fitness. If you're just starting out on a new exercise program, you should start gradually and build up – do not try to do too much too quickly. 30 minutes, 3 times a week should be enough.

Don't push yourself too hard - you should never feel exhausted during or following exercise.

Heart Rate Training

To get the most out of your new piece of fitness equipment and see the best results from your training you should exercise at the right level of effort, and that means listening to your heart! Working out to a target heart rate means you can direct your workout to achieve different goals:

Good health - For those wishing to improve quality of life and general well being. Your sessions will need to be done at an intensity of between 50-60% of your estimated maximum heart rate, should last about 30 minutes and can be done on most days of the week.

Weight loss – To see a significant reduction in body fat, your sessions must be a little more intense - between 60 and 70% of your estimated maximum heart rate. These sessions can also be performed on most days of the week for up to 30 minutes.

Improving Fitness levels – These sessions should be performed at 70-80% of your estimated maximum heart rate and can also involve bouts of interval training that would have your heart rate peaking for short times near your maximum heart rate level. These are intense sessions and will require at least a 48 hour rest between sessions.

Calculating your target heart rate

First, you need to find your estimated maximum heart rate using the formula '220 minus your age in years'. So, if you are 35 years old your estimated maximum heart rate is:

$$220 - 35 = 185 \text{ beats per minute (bpm)}$$

Next, to calculate your target heart rate, simply multiply your estimated maximum heart rate (185bpm) by the applicable percentage. So, if your goal is better health:

$$185 \times 60\% = 111 \text{ bpm}$$


! NOTE: The important issue to remember with all estimated calculations is that they are just estimates – if you don't feel comfortable exercising at your target then reduce it to a level you are comfortable with.

Note: Heart rate training requires you to monitor your heart rate throughout the workout. For this we recommend using a chest strap (if your machine has a wireless receiver) or a heart rate monitor.

Seat Adjustment


1. Seat Height:

- Rotate the pedals so that one of the pedals is in the upward position.
- Place your foot in the toe clip the pedal closest to the floor and mount the bike. Ensure that the ball of your foot is over the center of the pedal. Your leg should be slightly bent at the knee.
- If your leg is too straight or your foot cannot touch the pedal you will need to lower the seat. If your leg is bent too much you will need to raise the seat.
- Dismount the bike and release / pull the seat post adjustment handle once loosened you may slide the seat post up or down as necessary.
- When the seat is in the desired position push the seat stem adjustment handle forward to secure the seat post. Note the final position mark on the seat stem for future reference.

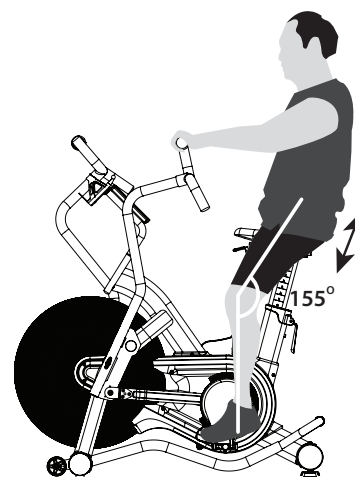

Seat Fore/Aft Position:


- Adjusting the fore/aft allows for a better fit. Dismount the bike and pull the seat adjustment handle and slide the seat forward or backward.
- Sit on your bike with cranks in the 3 & 9 o'clock position. Proper fore/ aft position is achieved when the small bump at the top of the shin directly below the knee cap (tibial tuberosity) is approximately over the pedal axle (at the 3 o'clock position).
- Dismount the bike and release the adjustment handle to secure the seat.

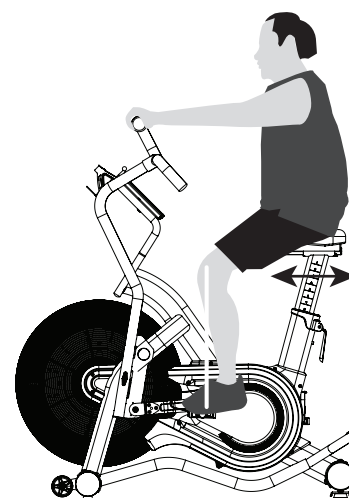

2. Pedal Strap Adjustment:

The straps of the Air Bike are designed to allow you to adjust the pedal to your individual foot size. The pedal includes spring-loaded, locking clips for easy adjustments. Follow the steps below to adjust the straps so that your foot does not slip or slide about on the pedal.

- Place the ball of each foot on the center of the pedal and under the strap.
- Rotate the pedals until one foot is in the position closest to you.
- To tighten the straps, simply pull down on the end of the strap until it fits snugly over your shoe. Make sure that the strap is secure, but not overly tight or pressing uncomfortably on your foot.
- Repeat these steps for the other foot.
- To loosen the pedal strap, press down at the top of the clip that holds the strap secure, and pull the strap up. Release the clip to lock the strap into place.

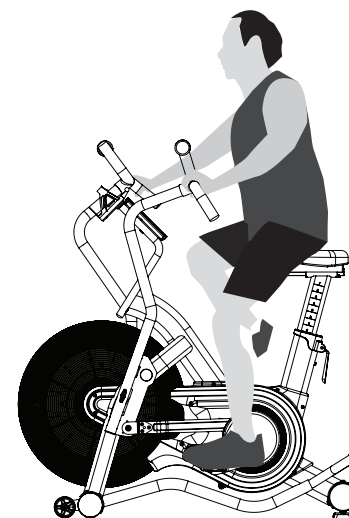


3. Comfortable Position Check:

- Now that you have established a riding position, take a few minutes to ride the bike and confirm that your position is comfortable. Start pedaling at a slow pace with your toes and knees pointed directly forward. Hold the grips lightly and in a position that allows your shoulders and upper body to relax. Pedal easily at a low resistance until you feel confident that you could ride in that position comfortably for the duration of your workout.


WARNING: The equipment is not equipped with a free wheel and therefore the moving parts cannot be stopped immediately.

NOTE: This product has an integrated speed dependent resistance / braking system.

Console Assembly

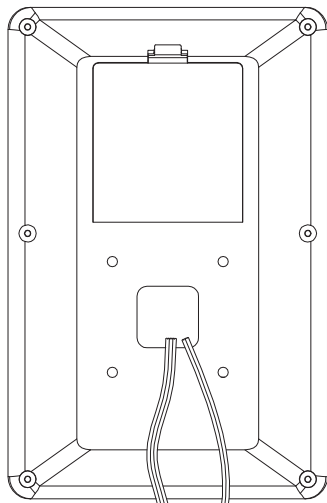

3 PIN 2 PIN

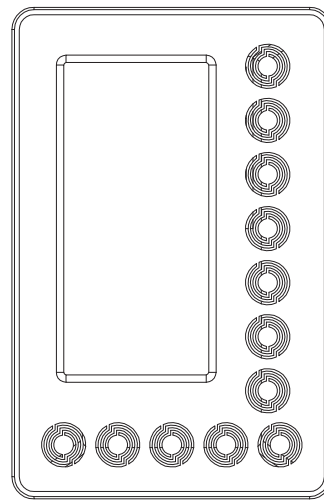

K. Consloe




F1. 2 PIN Consloe Connect Wire 550m/m



F3. 3 PIN Tension Knob Connect Wire 550m/m



F4. 2 PIN Speed Sensor Wire 750m/m (with Sensor)

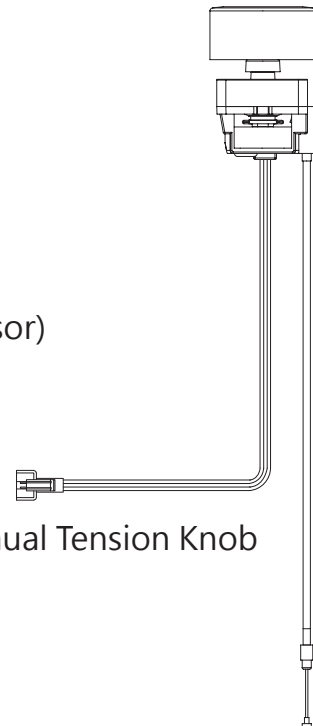

K-3 Manual Tension Knob

Parts List

P/N	DESCRIPTION	QTY	P/N	DESCRIPTION	QTY
MF	Main Frame	1	B	Front Stabilizer	1
A1-A	Ribbed Belt Wheel Assembly	1	B-A	Front Stabilizer Assembly	1
A1-A-1	Ribbed Belt Wheel	1	B1	Front Stabilizer End Cap	2
A1-A-2	Crank Arm - R	1	B2-A	Moving Wheel Assembly	2
A1-A-3	Hex Socket Head Cap Bolt (M8 x 20mm)	1	B3	Allen Head Bolt (M8 X 50mm)	2
A1-A-4	Spring Pin (Ø6 x 25mm)	1	B4	M8 Capnut	2
A2	Ribbed Belt - 692 J7	1	B5	Foot Stop	2
A3	Magnetic (OD15 X 7mm)	1	B6	Phillip Head Machine Screw (M4 x 12mm)	4
A4	Hex Socket Head Cap Bolt (M8 X 35mm)	1	B7	Phillip Head Machine Screw (M4 x 19mm)	5
A6	Plastic Strip	1	B8	Lock Nut M6	10
A7-A	Shaped Crank Plate - L Assembly	1	C	Rear Stabilizer	1
A8-A	Shaped Crank Plate - R Assembly	1	C-A	Rear Stabilizer Assembly	1
A9	Hex Socket Head Cap Bolt (M5 X 6mm)	4	C1	Rear Stabilizer End Cap - Ø101.6	2
A10	Flat Washer (M5 X Ø13 X 1.5T)	4	C2	Height Adjustable Lock	2
A11	Hex Socket Head Cap Bolt (M5 X 15mm)	4	C3	Height Adjustable Foot Stop - Ø50	2
A12	Hex Nut - M12	4	D1-A	Dual Action Handle Bar (L) Assembly	1
A13	Fan Wheel Axle Adjusting Screw Set - M8	2	D2-A	Dual Action Handle Bar (R) Assembly	1
A23	Hex Socket Head Cap Bolt (M6 X 12mm)	1	D2-1	Lock Pin Knob	1
A24	Spring Washer - M6	6	D2-2	Lock Pin Axle Keeper	1
A28	Seat Post Mounting Cap	6	D2-3	Lock Pin Spring	1
A29	Seat Post Reducer Spacer	1	D2-4	Lock Pin Axle	1
A30	Allen Head Bolt (M6 X 10mm)	1	D2-7	Allen Head Bolt (M6 x 25mm)	1
A31	Metal Sleeve - (Ø10 X 43.2mm)	2	D6	Phillip Head Machine Screw (M5 X 8mm)	4
A32-A	Cam Handle Assembly	1	D7	Handle Bar End Cap - Low	2
A35	Crank Arm Cover (R + L) - Large	1	D8	Bearing - 6203ZZ	2
A36	Crank Arm Cover (R + L) - Small	2	E-A-PM3	Console Support Frame Assembly	1
A37	Crank Axle - M25 X P1.5	2	E2	Bottle Holder (W/Screw)	1
A37-1	C-Clip S25	1	k	Console Assembly	1
A39	Crank Arm Assembly (L)	1	F1	2 Pin Console Connect Wire 550 m/m	1
A40	Spacer (Ø25 X 31 X T2mm)	1	F3	3 Pin Tension Knob Connect Wire 550 m/m	1
A41	Hex Socket Head Cap Bolt (M8 X 40mm)	2	F4	2 Pin Speed Sensor Wire 750m/m (with Sensor)	1
A42	Bearing - 6005ZZ	4	F7	Phillip Head Machine Screw (M5x12m/m)	1
A43	Axle Adapter Washer	1	G	Foot Peg	2
A44	Hex Socket Head Cap Bolt (M6 X 20mm)	1	H1 / H2	Pedal Set - L+R	1
A45	Metal Stop	1	I	Fixing Plate	2
A46	Saddle (LS-A22)	2	J1	End Cap	2
A47	Saddle Base	1	J2	Hex Socket Flat Head Bolt (M8 x 30mm)	4
A48	Nylon Nut (M8)	6	J3	M8 Nylon Locknut	2
A49	Spring Washer - M8	6	J4	Disc Spring Spacer	2
A50	Seat Post	1	J5	Hex Socket Flat Head Machine Screw (M6 x 15mm)	6
A50-A	Seat Post Assembly	1	J6	Allen Head Bolt (M10 x 20mm)	8
A53-A	Sliding Post Assembly	1	J7	Hex Socket Head Cap Bolt (M6 x 8mm)	2
A54	Square End Cap	1	K1	Tension Knob Cover (L)	1
A55	Adjustment Grip	1	K2	Tension Knob Cover (R)	1
A57	Phillip Head Screw (M6 X 15mm)	1	K3	Manual Tension Knob	1
A60	Stop Ball - OD10mm	1	K4	Tension Cable	1
A65	Hex Socket Head Cap Bolt (M6 X 35mm)	1	K5	C-Clip S12	1
A66	Steel - Fan Wheel Cover - L	1	K6-A	Magnetic Resistance Set	1
A67	Steel - Fan Wheel Cover - R	1	K7	Fan Wheel Axle (OD12 x 153mm)	1
A68	Front Fan Wheel Cover - L	1	K8-A	Fan Wheel Pulley Assembly	1
A69	Front Fan Wheel Cover - R	1	K9	Steel Fly Wheel	1
A70	Main Body Belt Cover (L)	1	K10	Wave Washer Ø12	1
A71	Main Body Belt Cover (R)	1	K11	Hex Socket Flat Head Machine Screw (M4 x 35mm)	12
A72	Sensor Housing	1	K12	Aluminun Pad	4
A74	Phillip Head Self Tapping Screw (M4 x 15mm)	7	K13	Plastic Bushing Ø10 x Ø4 x 25mm	4
A76	Plastic Strip Holder	2	K14	Plastic Bushing	4
A77	Phillip Head Machine Screw (M4 x 10mm)	2	K16	Phillip Head Machine Screw (M5*10mm)	2
A78	Spring	1	K17	Flat Washer (M12 x 1.5t x Ø20)	1
A79	Gasket	1	K18	Flat Washer (M8 x 2.0t x Ø16)	4
A80	Metal Plate 22mmX22mm0.4T	1	HP	Hardware Packing	1
A80-1	Metal Plate 22mmX22mm0.6T	1			

Your Warranty

This product is supplied with a 1 year warranty as follows:

This product is warranted for use in a commercial environment

This warranty excludes damage to the finish of the machine, damage sustained as a result form neglect, abuse, or failure to follow the suggested maintenance requirements (see Maintanance), shipping charges and if applicable, labor for the installation of any parts shipped to the owner under this warranty.

Please Note: Warranty details may vary from one market area to another

Warranty Terms

We warrants that the Product you have purchased from an authorised reseller is free from defects in materials and workmanship. The Warranty is valid subject to normal and reasonable use in the environment as described above, and correct assembly of the product during the warranty period. The warranty period extends to the original purchaser only. It is not transferable to anyone who subsequently purchases the Product from you.

The warranty excludes normal wear and tear on parts.

Your sales receipt, showing the date of purchase of the product, is your proof of the date of purchase.

This warranty becomes valid only if the Product is assembled / installed according to the instructions / directions included with the product. This warranty does not extend to any product that has been damaged or rendered defective: (a) as a result of accident, misuse, abuse or lack of reasonable care; (b) by the use of parts not manufactured by us or sold by us by modification of the product; (d) as a result of service by anyone else other than us or an authorised warranty service provider.

During the warranty period we will at no additional charge provide replacement part(s) or repair the product (at our option) if it becomes defective, malfunctions or otherwise fails to conform with this warranty under normal, non-commercial, personal, family or household use. In repairing the product, we may replace defective parts or at the option of ours, use serviceable used parts that are equivalent to new parts in performance. All exchanged parts and products replaced under this warranty will become the property of ours. We reserves the right to change manufacturers of any part to cover any existing warranty.

If the product must be returned, you must return the Product or defective part to us in its original container (or equivalent) with Proof of Purchase. Any evidence of alteration, erasing or forgery of proof of purchase documents will be cause to void this warranty. You must prepay any shipping charges and you are responsible for insuring any product or part that is returned. Should any product submitted for warranty service be found to be ineligible, an estimate of repair cost will be furnished and the repair will be made if requested, upon our receipt of payment or acceptable arrangement of payment. Under no circumstances will returns be accepted without return authorisation by our Customer Service department.

To obtain warranty service you must and provide the following information:

Name of Product, Product Code, Batch No, Date Purchased, and Nature of fault or part number required.

Neither dealer of this product nor any retail establishment selling this product has any authority to make any warranties or to promise remedies in addition to, or inconsistent with, those stated above. This warranty does not affect your statutory rights.

Please note that warranty terms may vary from one market area to another

ReNeGaDE